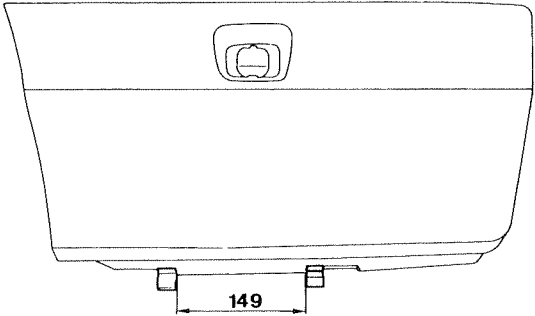
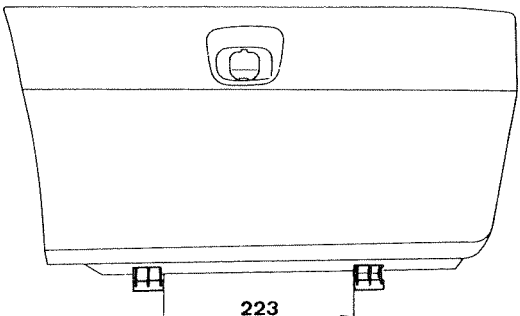
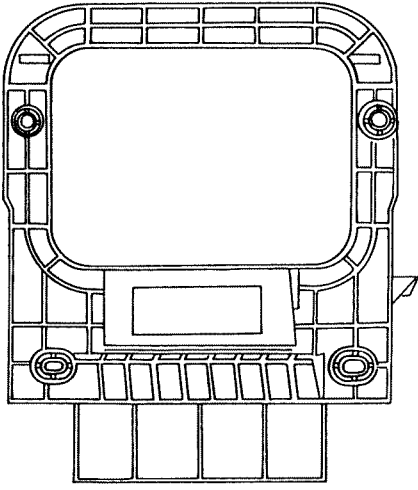
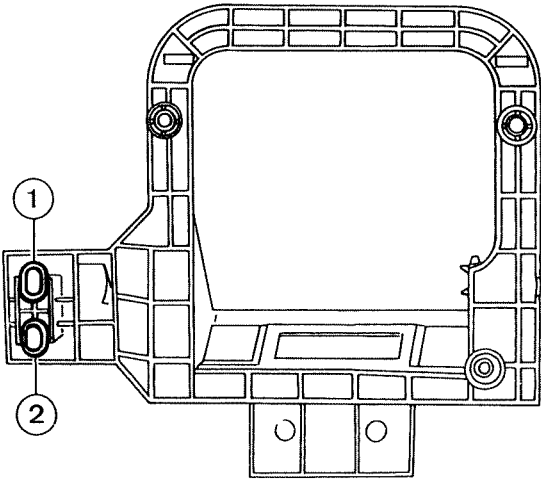


13 - BODY

Glove boxes — all 505 models

When stocks of glove boxes as fitted to 505 → MY81 are exhausted, the Parts Division will supply instead a glove box as fitted on 505 → MY82.

To fit the latter, it is necessary to use a glove box bracket (Part Number **8222.34**) with a different lower fixing (1) from the earlier bracket (Part Number **8222.33**).

505 → MY 81	505 → MY82
	
	
Part Number 8222.33	Part Number 8222.34

FITTING

Parts required

- 1 glove box
- 2 hinge pins (Part Number **8222.35**)
- 1 bracket (Part Number **8222.34**)
- 1 cage nut $\varnothing 6$ (Part Number **6941.60**)
- 1 screw 6 x 100 - 45
- 1 flat washer

METHOD

- Remove the old bracket.
- Offer up the new bracket and if necessary cut back the lower right-hand bracket fixing stud on the bulkhead.
- Mark, then cut out, a 20mm x 52mm (1in. x 2in.) rectangle from the bulkhead sound insulation material to allow passage of the fixing (1).
- Centre punch the bulkhead through the hole (2).
- Drill the bulkhead $\varnothing 10$.
- Fit the cage nut.
- Apply mastic round the drilling between the bulkhead and the bracket.
- Attach the bracket.
- Fit the glove box with its two hinge pins.
- On the engine side of the bulkhead, apply mastic to seal the cage nut.